

Cleaning Instructions

1. Make sure that you have a steel barrel at the end of the ash auger
2. Turn on ash auger and let it run while cleaning
3. Open top door and pull ash tray out and dump in barrel then put tray back
4. Change the levers to open the back door of the flue tubes
5. Clean flue tubes using the tool provided (push tool all the way back and let ash drop into auger)
6. Put door levers back to close door in back then close top door
7. Open bottom door and make sure all ash is picked up by ash auger
8. Open doors on pot and clean out ash let it drop into ash auger
9. Close bottom door and wait for ash auger to clear up
10. When clear turn off ash auger
11. Run stove